




PuduRobotics



www.pudurobotics.com

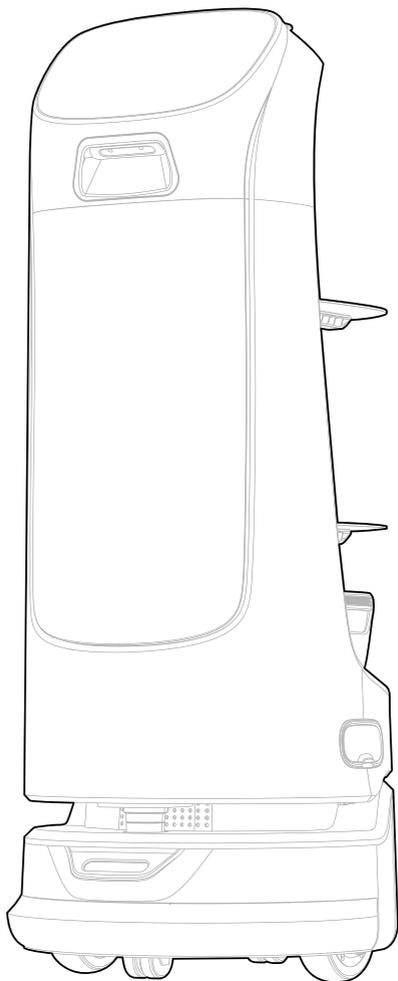

KettyBot

User Manual **(V1.1)**

Contents

Safety Instructions	02
In the Box	06
How to Use	09
Service Features	23
Maintenance and Care	28
Troubleshooting	29
After-sales Service	30

Statement

Copyright © 2021 Shenzhen PuduRobotics Co., Ltd. All rights reserved.

This document may not be copied, reproduced, transcribed or translated, in part or in whole, by any persons or organizations, or be transmitted in any form or by any means (electronic, photocopy, recording, etc.) for any commercial purposes without the prior written permission of Shenzhen PuduRobotics Unless otherwise specified, this document is used as a user guide only and comes with no guarantees of any kind.



Safety Instructions

1.1 Instructions for Use



- This wheeled robot can only be used indoors on flat surfaces such as wood floors, ceramic tiles, and thin carpets. Using in outdoor space (for example, open balcony), on the rugged ground (for example, stairs), in a temperature above 40°C or below 0°C, or on surfaces covered with fluid or gooey stuff is not allowed.
- Items on the tray must not be of excessive weight. A maximum of 10 kg per tray is recommended. Tap Done and the robot will perform the next delivery task immediately. Please finish picking up the dishes and then tap Done.
- Do not pick and place dishes while the robot is moving. If necessary, tap on the screen to pause before picking and placing any dish. The pausing time is 20s in cruise mode and 10s in other modes. The robot will resume moving after the pausing time expires.
- If the robot accidentally enters into any incorrect position due to blocking and some other reason, please suspend the task promptly and push the robot to the correct route before continuing the task.
- Do not pull the robot while it is working. If you need to push or move the robot, tap on the screen to stop it from moving first.
- Do not push the robot backward when the power is on.
- Do not block the robot components or overfill the tray. Otherwise, the robot may fail to move properly or get lost.
- Do not pat the device or press or tap hard on the screen, or damages may be caused.
- Do not overload the robot or put open-flame stoves or any flammable solid, gas, or liquid on the tray.
- Do not adjust the load when the robot is moving. It is only allowed after the robot is paused by touching the screen.
- Do not clean or maintain the robot when the power is on.
- Cables on the ground should be put away in advance to prevent the robot from dragging them. All sharp-edge objects (such as decoration wastes, glasses, nails) should be removed from the ground to prevent damage to the robot chassis.
- A maximum speed of 0.8m/s is recommended for safe operation. No playing is allowed in front of the robot to avoid unnecessary harm. Although the robot features automatic obstacle avoidance, there is a blind spot. Blocking the robot moving at a high speed may cause accidents.
- Delivering soups is not recommended without special customization. If the soup is delivered, stay alert to spilling and scalds. Give way to robots delivering hot tableware and soup pots to prevent collisions and scalds.

1.2 Environmental Instructions


- This robot is suitable for use in flat grounds, such as wood floors, ceramic tiles, and thin carpets, and not suitable for environments that come with steps, large slopes, and are too compact.
- It is not recommended to use the robot on any ground that is wet or with obvious standing water.
- Put away any wire or other objects on the ground to prevent the robot from being tripped or dragging them around.
- Using this product with obvious protrusions, such as thresholds, on the ground may cause dishes to be spilled. Make sure that the protrusions are no more than 0.5cm high.
- The aisle should be at least 0.55m wide for the robot to pass. In the case of a long aisle, a width of 0.6m is recommended for smooth moving. A width of 1.6m allows two robots to move in two directions (The required width depends on the technician’s evaluation of the scene).

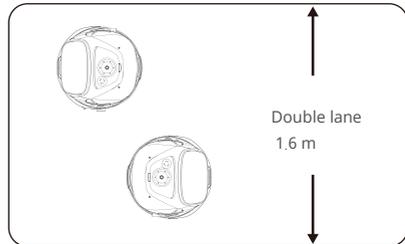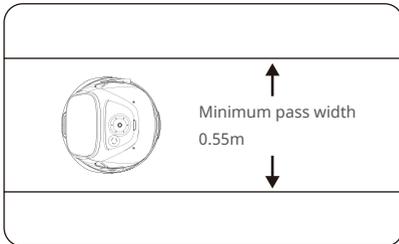


- The maximum possible slope is 5° for the robot. To prevent spilling, the suggested slope should be less than 4°, and the limit of 5° should not be exceeded. To prevent sliding, the robot should not be paused when moving uphill. To prevent falling, the slope should be at least 0.8m wide, and the roll angle should not exceed 5°.

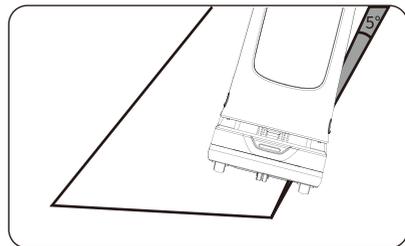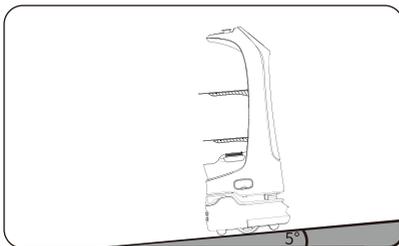

- Rails or other protective structures should be put in place at the edge of stairs, the entrance of downward slopes, and other locations where the robot may fall.
- Things that are black (for example, skirting line), polished (for example, wall), or transparent (for example, French window) at a height of 14 to 22cm or below may interfere with the radar and cause abnormal moving of the robot. Such sites should be modified to allow proper radar reflection (e.g., posting stickers).

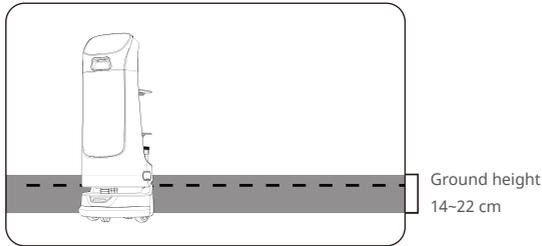

- The kitchen entrance should be at least 1.2m wide, otherwise, robots and the staff may block each other.
- Robots in the waiting area should be 35cm apart from each other, 15cm from the back wall, and 35cm from the sidewall.

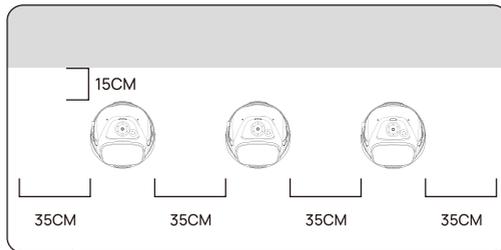

1.3 Instructions on Power Supply and Power Usage


- Please charge the battery to 100% when you start to use the robot for the first time.
- When the battery drops to 20%, the robot should be charged timely. Running at a low battery for a long time may impair battery life.
- When the battery is fully recharged, the cable should be timely disconnected.
- If the robot is not going to be used for a long time, power it off in time so as to protect the battery.

- Always use exclusively original rechargeable batteries and chargers. Do not charge your robot using non-original chargers.
- Charge the robot according to the power voltage indicated on the charger nameplate.
- Make sure that the power voltage matches the voltage indicated on the charger, or it may cause damages to the charger.
- Take care to protect the power cord from being pulled or pinched.
- Someone should be designated to take over the charging. Unwatched charging of the robot or batteries is forbidden.
- Robots should not be charged in locations near flammable and explosive materials.
- Robots should be stored and charged in a dry location with a constant temperature no higher than 40°C. Both the robot and the charger should be protected from water.
- The charger should be protected from collision damage.
- In the case of abnormal charging currents or any other damage, replace the charger immediately.
- When the robot sends an alarm, disconnect the charger immediately.

1.4 Safety Instructions

- Do not put open-flame stoves or any flammable solid, gas, or liquid on the tray.
- Do not clean or maintain the robot when the power is on.
- A maximum speed of 0.8m/s is recommended for safe operation. No playing is allowed in front of the robot to avoid unnecessary harm.
- Do not adjust the load on the tray when the robot is moving. It is only allowed after the robot is paused by touching the screen.
- When the robot arrives at the designated table, wait until the robot stops completely before you serve the food or do something else. This is to avoid any food loss and personal injury caused by accidental collision.
- If the robot walks randomly, operations on the screen do not work, or any other emergency occurs, press the emergency stop switch.
- Cables on the ground should be put away in advance to prevent the robot from dragging them. Use All sharp-edge objects (such as decoration wastes, glasses, nails) should be removed from the ground before use to prevent damage to the robot chassis.
- Do not pull or transport the robot while it is working. If you need to do so, tap on the screen to stop it from moving first.
- Do not spill any liquid into the product.
- Do not place any non-transportable objects (including children and pets) on the robot, regardless of whether the robot is stationary or in motion.
- Although the robot features automatic obstacle avoidance, blocking the robot abruptly from moving at a high speed may cause accidents.

- The robot is equipped with a downward sensor, and the recognition area is as shown in the figure below:

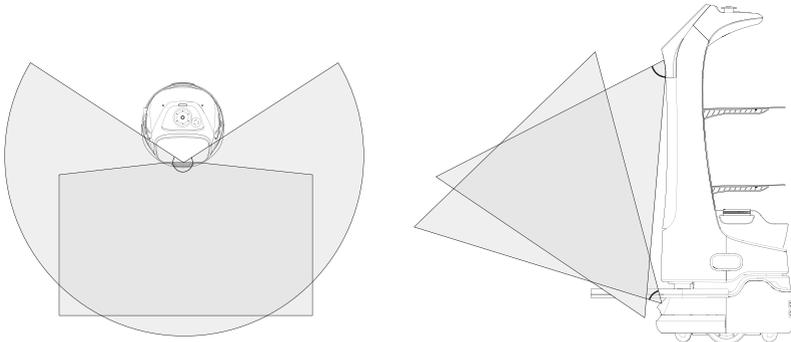**Note:** ⚠



The features are updated from time to time. More information on the features can be found at www.pudurobotics.com.

In the Box


2.1 Packing List

Robot × 1, KettyBot User Manual × 1, Certificate × 1, Warranty Card × 1, Charger × 1, QR Code Stickers × 100, Power Key × 2.


2.2 Components

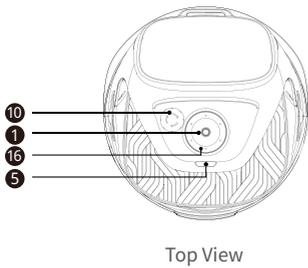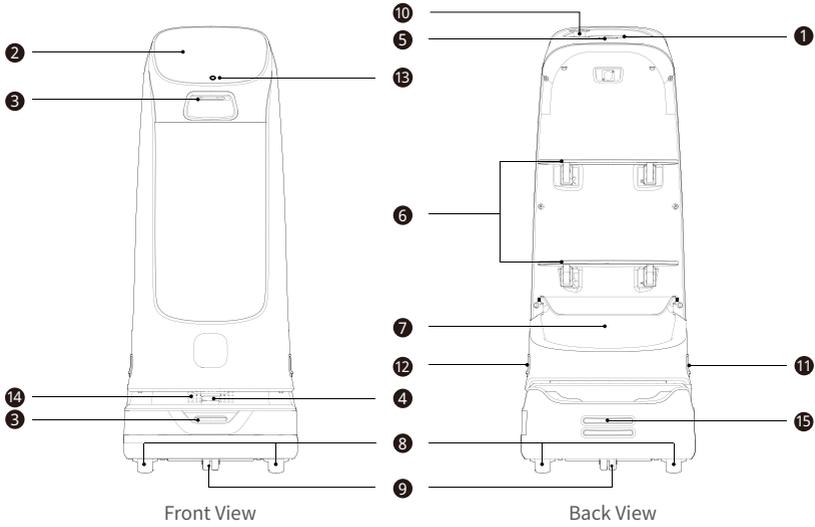


- ① Visual sensor
- ② Screen
- ③ Depth Sensor
- ④ Laser Radar
- ⑤ Power Switch
- ⑥ Tray
- ⑦ Collection Box
- ⑧ Driving Wheel
- ⑨ Auxiliary Wheel
- ⑩ Emergency Stop Switch
- ⑪ Charging Port
- ⑫ Key Switch
- ⑬ Front camera
- ⑭ Audio equipment
- ⑮ Rechargeable pole
- ⑯ Microphone array

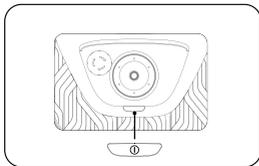

Power Button

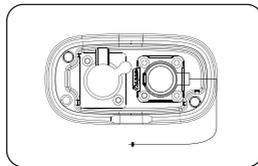

Charging Cable

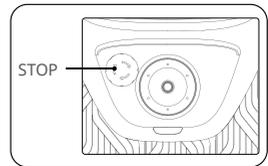


Emergency Stop Switch

2.3 Specifications

Feature	Description
Model	PNT
Working voltage	DC 23-29V
Power input	AC 100-240V, 50/60Hz
Power output	29V-8A
Charging time	4.5h
Battery life	>8h
Cruise speed	Adjustable between 0.5~0.9m/s
No. of trays	Two trays+one storage basket
Tray load	10kg/tray
Climbing angle	Max 5°
Machine material	ABS/Aviation Grade Aluminum Alloy
Battery capacity	25.6Ah
Robot weight	38kg
Robot dimensions	435*450*1120 (mm)
Screen size	10.1-inch HD color touch screen
Speaker power	2 × 20W stereo speakers
Design life span	5 years
Working temperature	0~40°C
Storage temperature	-10~60°C
Charging mode	Charging with manual charging, automatic self-charging supported
Working humidity	Relative humidity 0~95% (without condensation)
Ad screen size	409.8mm*230.4 mm
ESP32	Frequency range: 2.4 GHz ~ 2.5 GHz
WIFI	2.4G, Frequency range: 2.400 GHz ~ 2.497 GHz (2.4 GHz ISM Band); 5G, Frequency range: 4.900 GHz ~ 5.845 GHz (5.0 GHz ISM Band)
Working altitude	Below 2000m
Working environment	Indoor environment, flat and smooth ground
IP grade	IP20

2.4 Tray Size and Height between Trays

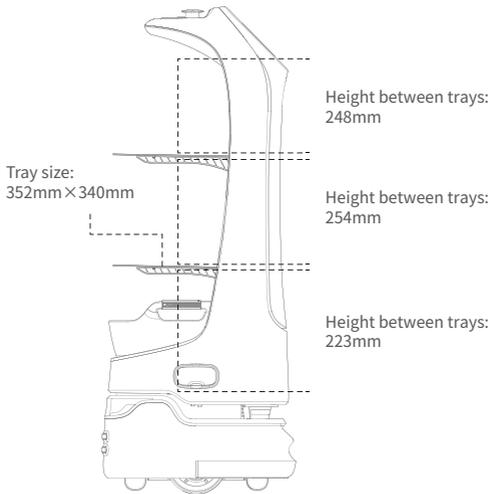

How to Use

3.1 Charging Instructions

How to charge:

Plug the charging cable into the charging port of the robot. When successfully connected, the robot will display a prompt.

Notes for charging:


- 1) To maximize the efficiency and battery life of the robot, always keep the battery level above 10%.
- 2) A battery level lower than 10% means that the robot will soon run out of power and needs to be charged as quickly as possible.
- 3) A battery level lower than 2% means that the battery is under protection. In this case, the robot will be unable to perform tasks and must be charged before it can be used again.

3.2 Charging screens

This screen appears indicating the robot is charging.




This screen appears indicating the charging cycle is complete and the battery is fully charged.

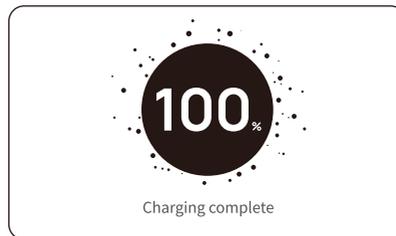

3.3 Power On, Shut Down, Pause, and Start


Before power on

Before turning on the power, place the robot below the visual mark, verify that the key switch is turned on.

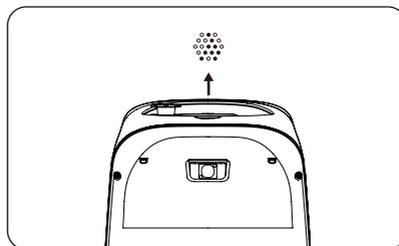


Power on

Press and hold the power button for about 0.5 seconds, and the bottom light strip will appear in blue.

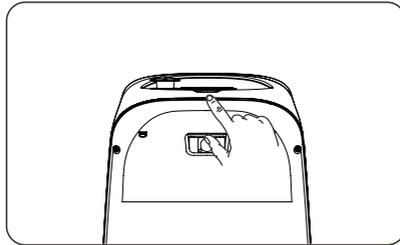


Powering on

The screen enters the working mode, indicating that the robot is successfully powered on.

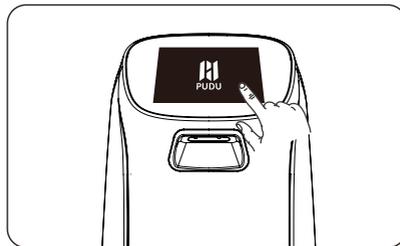


Power Off

Press and hold the power button for 3 seconds, and the screen will indicate the robot is shutting down. The screen turns black, indicating a successful shutdown. Press and hold the power button for 8 seconds, and the robot can be forcibly powered off and shut down. (This function is not recommended unless anything abnormal happens to the robot.)

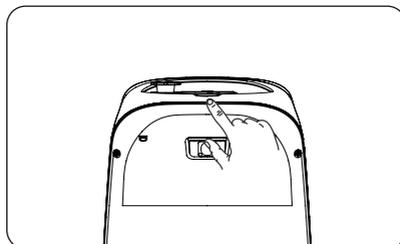


Pause

When the robot is moving, touch the screen to pause the robot.

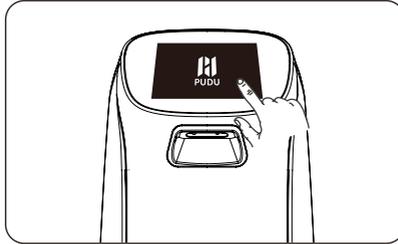


Paused

The screen shows “Paused” .

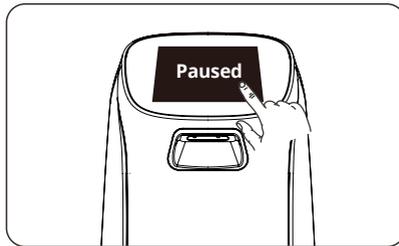

Start

Touch the screen again for the robot to move again. Paused robots will automatically resume moving if there are no operations in 10 seconds (Cruise Mode) or 10 seconds (other modes).

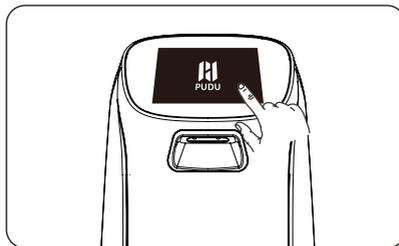

3.4 Mode Options




Note: ⚠

The Queuing Mode is only available on robots within mainland China.

Customer Attraction Mode:

The robot can sense passers-by in the attraction area and play speech to attract customers. Customers can talk to the robot, view information such as discounts and special dishes, and choose to be led by the robot to the restaurant.

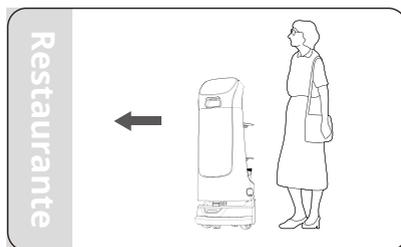


Escorting Mode:


The robot can sense passers-by in the attraction area and play speech to attract customers. Customers can talk to the robot, view information such as discounts and special dishes, and choose to be led by the robot to the restaurant.

3.5 Customer Attraction Mode


The robot stands at the door to attract potential customers, talks to them about what's unique about its restaurant, and finally persuades them into dining here.

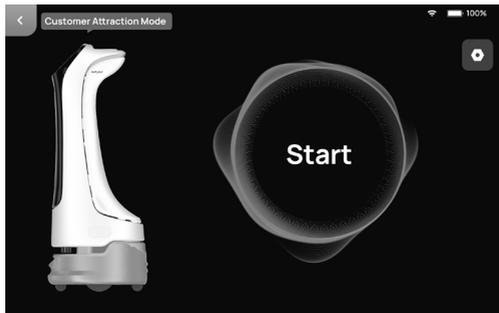


1. Select Customer Attraction Mode on the home screen.
2. On the Customer Attraction screen that appears, tap Settings to select a location for customer attraction and compose the speech.
3. Tap Go, and the robot will go to the location and start attracting customers proactively.

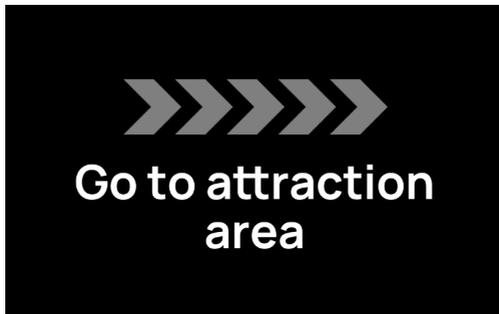


4. Tap on the screen to pause the task, and tap again to resume. You can also select Cancel Task to cancel the task.

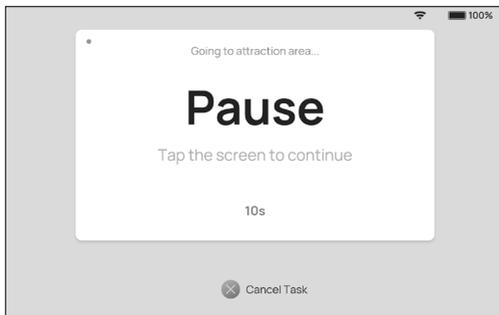


5. Upon arrival at the specified location, the robot plays the speech and automatically switches to the interaction screen when it detects someone coming near.

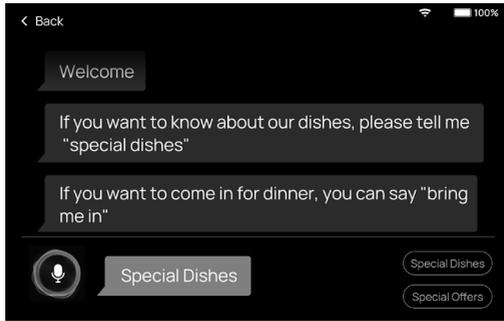

6. Customers can talk to the robot, check the special dishes, and choose to be led by the robot to the restaurant.

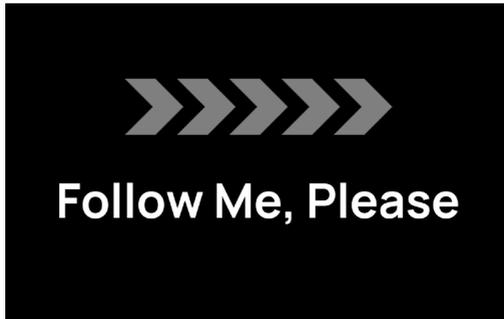

7. When it has led the guests to the store, the robot can go back to attract more customers or escort the customers to their table.

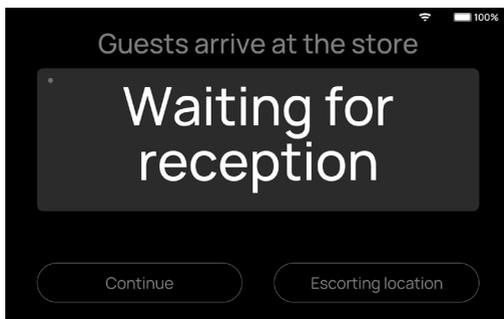


3.6 Escorting Mode


This mode is used to get the robot to escort customers to their table. Perform the following steps
Escorting Mode:



1. Select Escorting Mode on the home screen.
2. Tap the table number that requires escorting, and the robot plays the escorting speech and leads the guests to their table.

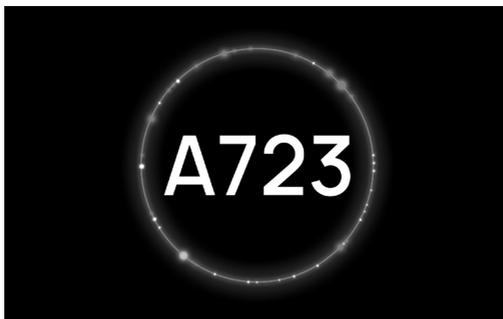

3. Tap on the screen to pause the task, and tap again to resume. You can also select Cancel Task or Return to Escorting Location.

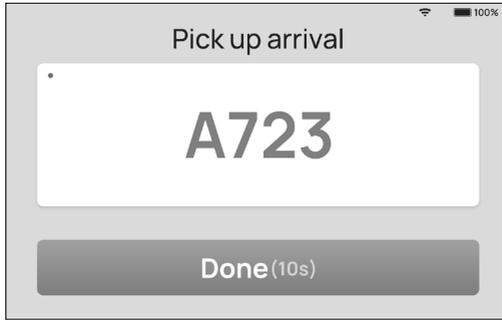


4. Once the customers sit down, tap Done for the robot to return to the escorting location, or the robot automatically returns in 10 seconds.


3.8 Cruise Mode

A commonly used mode in which the robot cruises in a specific environment, gives away snacks, or attracts customers. Perform the following steps for the Cruise Mode:

1. Select Cruise Mode on the home screen.

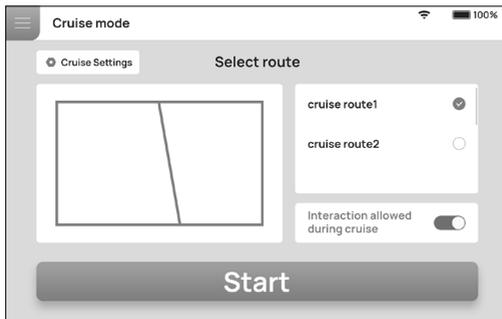

2. Select an automatic cruise route. After the interaction switch is turned on, the robot can lead customers to the restaurant during the cruise.

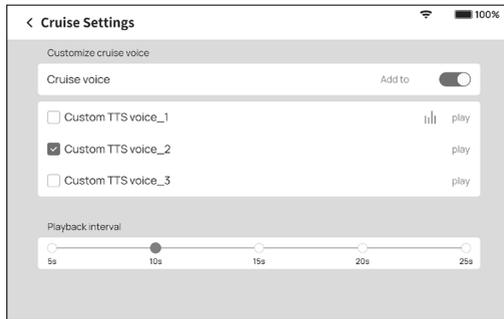

3. For cruise settings, you can set the cruise speech and interval.
4. Select Go, and the robot starts cruising.


3.9 Delivery Mode

A commonly used mode in which the robot makes task-based delivery to designated locations. Perform the following steps for Delivery Mode;

1. Select the delivery function on the home screen.



2. Put the dishes on the tray.
3. Tap the tray which holds the dishes, and select the desired table number. The top tray is automatically selected by default, simply select the desired table number.
4. Tap Go, and the robot starts performing the task.

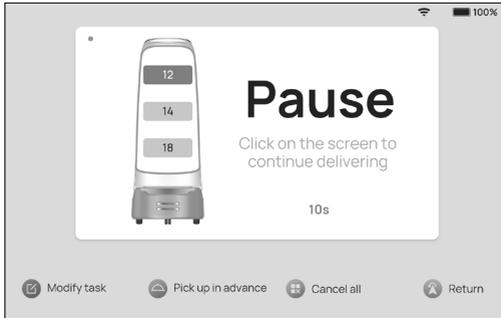

5. The robot quickly arrives at the designated location by moving along the predetermined path. During delivery, touch the stop command on the screen and the robot will immediately stop and wait. If the command is not touched again in 10 seconds, the robot will restart to continue the task.


3.10 Birthday Mode

Deliver gifts and play birthday songs for customers who are celebrating their birthdays. Perform the following steps for Birthday Mode:


1. Select Birthday Mode on the home screen.



2. Place the gift on the tray, and the gift can only be delivered to one location at a time.
3. Select the desired table number.
4. Tap Go, and the robot starts performing the task. The robot plays songs in the set playlist for Birthday Mode.
5. The robot quickly arrives at the designated location by moving along the predetermined path. During delivery, touch the stop command on the screen and the robot will immediately stop and wait. If the command is not touched again in 5 seconds, the robot will restart to continue the task. On the paused screen, you can Modify Task, Pick Up in Advance, Cancel All, and Return.

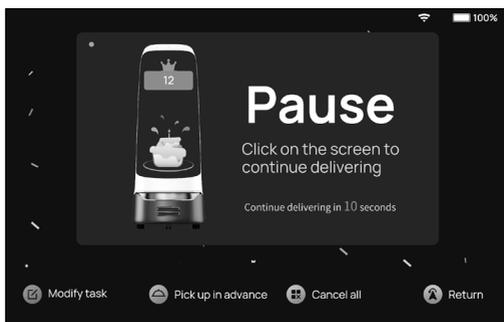

6. Tap Done upon arrival at the designated location, and the robot will return to the pickup location.

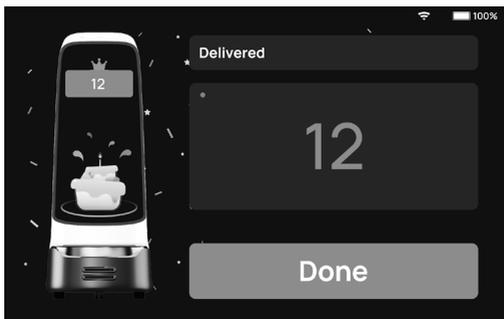

3.11 Warning Prompts

If any of the following circumstances occurs, the robot will stop working and sound an alarm, and certain prompt messages will appear on the screen. The robot will need your help at this point.

Prompt	Solution
Low battery	Push the robot back for charging (Figure 1)
Loss of location information	Move the robot below the visual mark (Figure 2)
Driving or auxiliary wheel stuck or entangled	Clean the driving or auxiliary wheel
Suspended, off the ground	Place the robot on flat ground

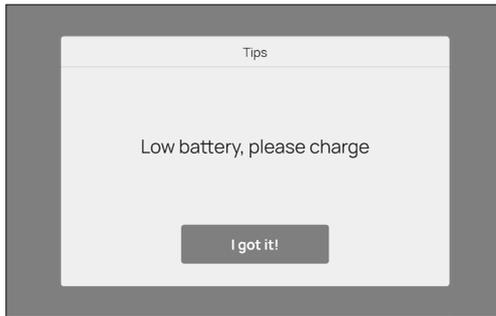




Figure 1



Figure 2

3.11 Emergency Handling


When the robot is not working properly or in any other emergency that may cause harm to the surrounding environment, you can stop the robot by pressing the emergency stop switch on the top.

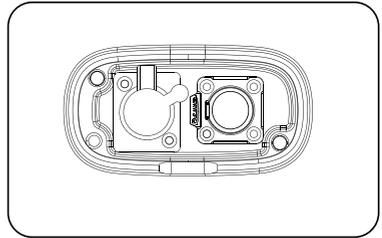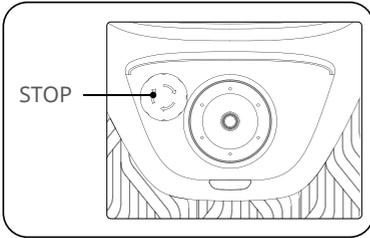

Service Features

4.1 Map Settings


Map Settings enable multiple map selection. When the robot is in one-to-one mode, set a docking location for the selected map.

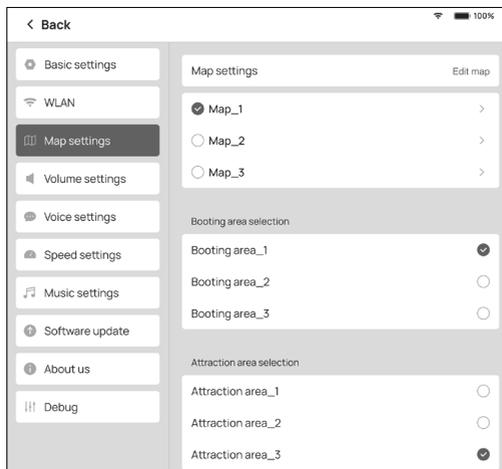

4.2 Voice Settings


Voice Settings provide voice pack replacement and voice custom settings. The voice pack can be replaced by doing the following:

1. Check for available voice packs, select and download a voice pack.
2. After the download completes, select the desired voice pack to replace the old one.
3. Selecting Default will reset the robot back to its default voice pack.
4. Tap and hold the voice pack to delete it.

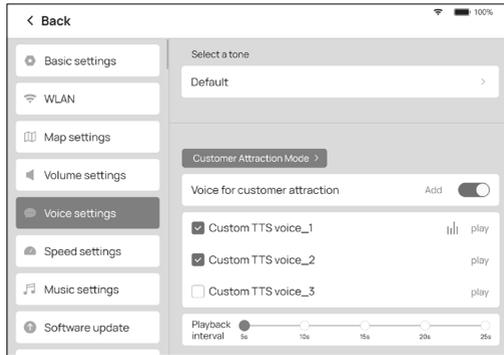

Customize the cruise voice by performing the following steps:

1. Select Add Voice, and the voice text editing window appears. Enter the text to be played, and tap OK to generate a custom voice.
2. You can add multiple voices, which will be played in random order.
3. Turn off the cruise voice switch to restore the default voice pack.
4. Tap on a voice to play it, and tap and hold a voice pack to delete it.

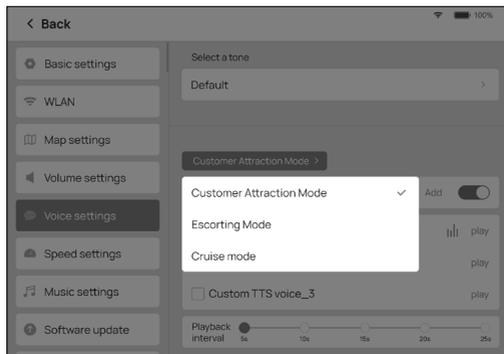

4.3 Docking Instructions

Three docking modes are available for different sizes of restaurants.


1. One-to-one docking mode: Set a fixed docking location for each robot.
2. Free docking mode: Set multiple locations for the robot to dock by priority.
3. Waiting mode: Apart from the abovementioned docking locations, you can also set a temporary docking location for robots to wait before a vacancy appears. When the robot docks at a non-docking location without a task, you may select the return command to make the robot automatically return to the docking location, or push it to the docking location.



Note: ⚠️
When the robot is in a temporary docking location, its state is shown as “Temporarily docked” .
Once a vacancy appears in the pickup area, it will automatically go there for docking.


4.4 Speed Settings

Set the delivery speed and cruise speed with the options of 0.5m/s—1.2m/s.

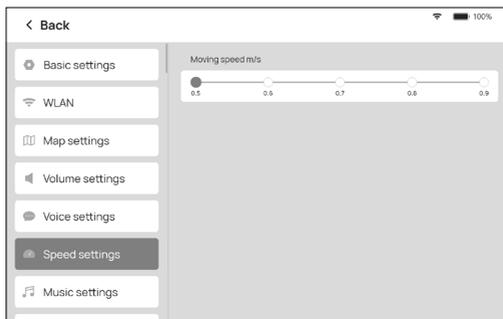


4.5 Advertising Screen Settings

The advertising screen setting function can view the current status of the advertising screen and adjust the volume of the advertising screen.

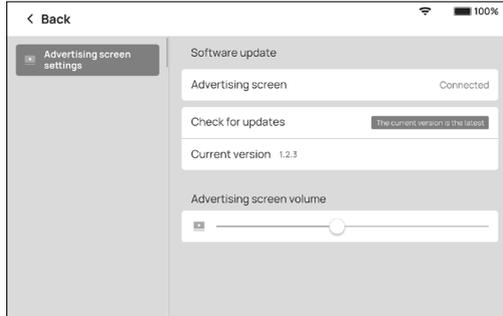

4.6 Version Update


Check which version is currently installed and whether it is the latest version. If it is not the latest version, you can check for, download, and update to the latest version.

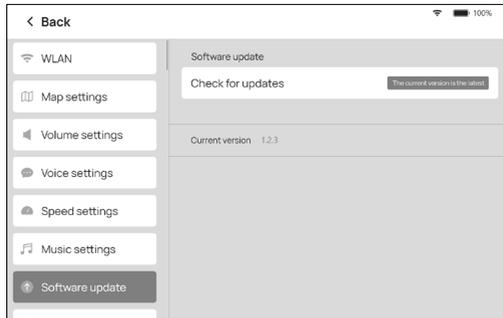

4.7 Voice Interaction

When the robot is in attracting customers, cruising (interaction turned on), you can tap on the screen or use wake-up voice to activate voice interaction with the robot.

1. Internet connection is required for voice interaction.
2. Entered voices will be displayed in text on the screen.
3. Responses of the system will be played in voice and displayed in text on the screen.
4. Tapping on the screen to start or end voice interaction will end voice wake-up. If no interaction occurs for a period of time, the system will automatically exit.

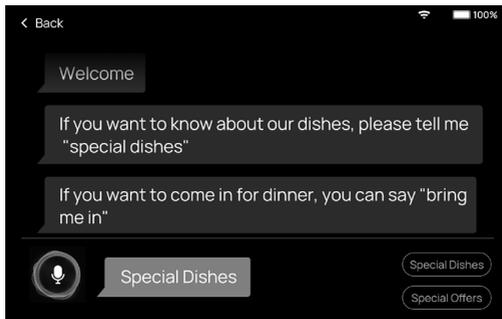

4.8 Automatic Self-charging

1. Automatic self-charging is supported (charging pile to be purchased separately).
2. You can also move the robot to the charging file, and tap "Charge Now" on the screen for a charge (as shown in the figure):



Maintenance and Care

5.1 Trays, Driving Wheel and Auxiliary Wheel

Keep the trays tidy; inspect and clean them at least once a week. Wipe the robot with a clean cotton cloth. When the bottom of the wheel is entangled or has some debris stuck on it, lift the robot to clean it up.

5.2 Sensor Care

The top positioning sensor and the 3D obstacle avoidance sensor should be inspected and cleaned at least once a week. In case of unexpected contamination, make sure to address it immediately to avoid blocking the sensor and prevent the robot from working improperly. Use soft tissues or other lens cleaning supplies for the cleaning.


5.3 Robot Care

Keep the robot clean and wipe it with a clean cotton cloth. Do not lift, climb on, hit, push, or attempt to break off the robot, and pile any sundries on it. In case of malfunction, do not remove the screws or open the cover for repair without Pudu's permission or guidance.

5.4 Transporting the Robot

The robot should be transported following the GB/T 4857.23-2012 Requirements for Road Transportation with Steel Spring Damping Trucks and using a forklift or other transportation tools.

The robot is a valuable device, so make sure to transport it as instructed in the following figure. You can lift the robot from the force-bearing area above the base (as shown in the figure). Lift the robot on both the left and right and keep it balanced. Keep the robot upright during transportation. Never attempt to transport it by lifting the tray or the box.

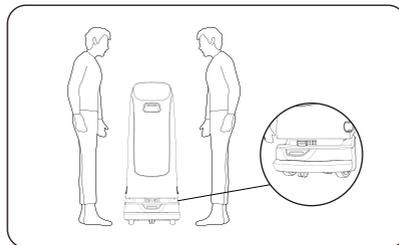

5.5 Mark Care

Do not hang other objects (such as balloons, barbed wire, and slogans) directly below the mark, and do not hang billboards or safety exit signs close to the mark. Be careful not to damage the mark when cleaning and maintaining the ceiling. Do not reposition or rotate the mark.

Troubleshooting

6.1 Power-on Self-test Fails

After verifying there is sufficient power, restart the robot below the positioning mark. If the self-test still fails, please contact our after-sales service team for help.

6.2 Robot Stops During Operation

1. Tap on the screen to show the pause page indicating the operation is paused. Tap again to resume operation.
2. After hearing the voice prompt “Excuse me” , tap on the screen to pause the robot. Then, align the robot to the path, and tap again to continue.

6.3 “Loss of Signal” Warning

The message “I’m lost. Please push me directly below the positioning mark.” appears on the screen. At this time, the robot will issue a voice prompt for help. Please push the robot directly below the positioning mark.

6.4 Robot Cannot be Powered On

1. Check if the emergency stop switch is pressed or damaged. If it is damaged, contact our customer service team for help.
2. Check if the robot is out of power. If so, charge the robot by connecting it to an adapter.
3. For other reasons, please contact our customer service team for help.

After-sales Service

7.1 Free Warranty

When the robots are under warranty (different warranty periods for different components, calculated from the receipt of the robot), Pudu offers a free warranty if:

- Defects are caused by non-human factors;
- There are no unauthorized disassembly, modification or addition not included in the user manual, or other faults caused by non-human factors;
- The robot S/N sticker and other labels are not removed or altered;
- Effective purchase certificate, receipt, and order number are provided;
- Damaged components are sent back to Pudu as required.

7.2 Paid Services

Pudu offers paid after-sales services when the robot is out-of-warranty or the policy of free warranty is not applicable:

- Online and remote technical support is provided, and customers should cooperate with engineers for diagnosis and troubleshooting;
- Technicians will offer on-site service when necessary;
- The “After-sales Service Form” should be filled when the policy of free warranty is not applicable;
- Customers should pay for both maintenance and spare parts.

7.3 Contact

For any questions, please call 400-0826-660.

Working hours: 9:00 - 12:00, 14:00 - 18:00, Monday to Saturday (GMT+8).

FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada compliance statement

CAN ICES-3(B)/NMB-3(B)

www.pudutech.com